



**ORIGINAL USER AND INSTALLATION INSTRUCTION:  
Weld-on Lifting Point 8-057**



**CONFORMITY**

BA11.278-067UK04.10.21

In accordance with the Machinery Directive 2006/42EC. CERTEX Danmark A/S assures, that the equipment supplied is CE marked and delivered in accordance with Danish Standard. If the customer makes any kind of modifications, or if the customer combines the product with a non-compliant product / component assumes CERTEX Danmark A/S is not responsible for the product.

**INFORMATION**

According to the Labour Inspection Authorization No. 2.3.0.4 "gripping" the staff to use lifting equipment must be instructed in the proper execution of work. The instruction must be in accordance with this authorization and shall include the specific actions required by each anhuigningsarbejde.

Before the equipment into service, this manual should be read through. The information is intended as a means to achieve the safe use of equipment.

User manual contains important information about how equipment is operating safely and properly.

Is the equipment used in accordance with these instructions may hazards and damage avoided.


Anyone using the equipment must read and act in accordance with instructions.

Furthermore, we refer also to WEA rules and regulations that otherwise apply on the spot. Including a.o. the message No 2:02:10.

**IMPORTANT! WLL is not exceeded, and label instructions must be followed.**

**YOKE 8-067 Eye Container Hook Instruction**

**Drawing**

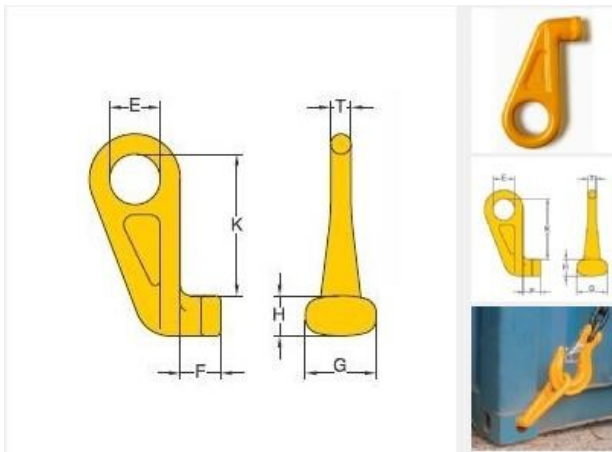


**Specification**

Item No.	Dsc.	Working Load Limit tonnes*	Dimensions (mm)							N.W. Kg
			E	F	G	H	K	T		
8-067-STR	Straight	12.5	70	45	75	48	192	25	3.9	
8-067-45LT	Left 45°	12.5	70	45	75	48	192	25	3.9	
8-067-45RH	Right 45°	12.5	70	45	75	48	192	25	3.9	


**Hints for Mounting**

1. Reference should be made to relevant Standards and other statutory regulations. Inspections should be carried out by competent persons only.
2. Before connecting slings and at every use, visually inspect YOKE Eye container Hook, paying particular attention to any evidence of corrosion, wear and deformation. For 8-067-45LT and 8-067-45RH, please ensure minimum 30 degrees inclination to the vertical and maximum inclination not to exceed 60 degrees to the vertical. For 8-067-STR, please ensure maximum inclination not to exceed 45 degrees to the vertical.

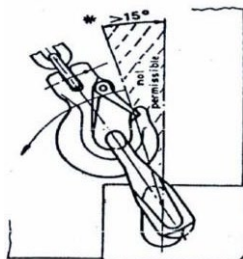

All Lifting components require regular inspection and periodic testing. As a guide, components showing >10% wear should be discarded.

For best practice, YOKE strongly recommend maintaining a log book (recording inspections and testing) for all lift components as well as inspecting prior to use.

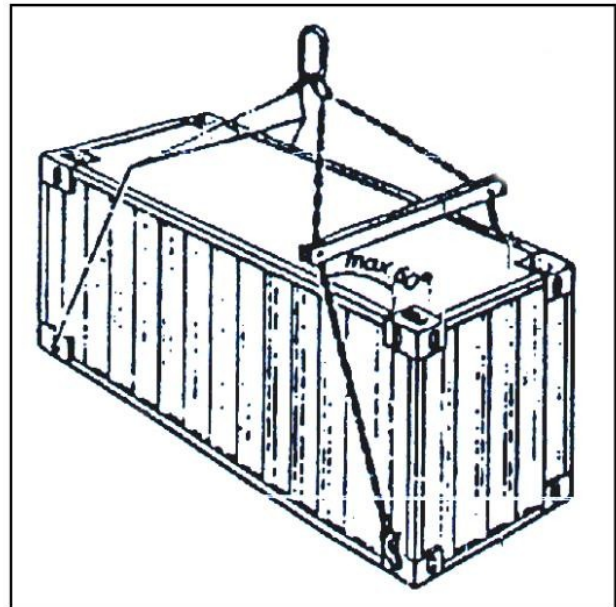

**Safety**

When YOKE Eye container Hook are used in a multileg assembly, care should be taken to calculate the WLL (Working Load Limit) due to the deration caused by forces acting in multiple directions. The reduction in WLL (Working Load Limit) for multileg assemblies should be checked with relevant Standards.

The YOKE Eye container Hook should be mounted in such a way that they may easily be accessed for inspection and assembly/disassembly of the sling.

**Remember: Safety is everyone's responsibility**



**Lifting Solutions Group**  
Axel Johnson International

Nyvang 16, 2<sup>nd</sup> floor left  
DK-5500 Middelfart  
Tlf.: +45 74 54 14 37

Virkelyst 17b  
DK-9400 Nørresundby  
Tlf.: +45 98 13 18 88

Jernholmen 45D+45G  
DK-2650 Hvidovre  
Tlf.: +45 36 77 40 30

Ollevej 4  
DK-6700 Esbjerg  
Tlf.: +45 75 13 08 44

**CERTEX Danmark A/S**  
Trekanten 6-8  
DK-6500 Vojens  
Tlf.: +45 74 54 14 37  
E-mail: info@certex.dk  
www.certex.dk