



ORIGINAL USER AND INSTALLATION INSTRUCTION: Weld-on Lifting Point 8-057

CERTEX

CONFORMITY

BA11.428-057UK30.09.21

In accordance with the Machinery Directive 2006/42EC, CERTEX Danmark A/S assures, that the equipment supplied is CE marked and delivered in accordance with Danish Standard. If the customer makes any kind of modifications, or if the customer combines the product with a non-compliant product / component assumes CERTEX Danmark A/S is not responsible for the product.

INFORMATION

According to the Labour Inspection Authorization No. 2.3.0.4 "gripping" the staff to use lifting equipment must be instructed in the proper execution of work. The instruction must be in accordance with this authorization and shall include the specific actions required by each anhugningsarbejde.

Before the equipment into service, this manual should be read through. The information is intended as a means to achieve the safe use of equipment.

User manual contains important information about how equipment is operating safely and properly.

If the equipment used in accordance with these instructions may hazards and damage avoided.

Anyone using the equipment must read and act in accordance with instructions.

Furthermore, we refer also to WEA rules and regulations that otherwise apply on the spot. Including a.o. The message No 2:02:10.

IMPORTANT! WLL is not exceeded, and label instructions must be followed.

YOKE WELD-ON LIFTING POINT WARNING AND APPLICATION INSTRUCTIONS

WARNING

- Loads may disengage from link if proper welding, assembly, and lifting procedures are not used.
- A falling load may cause serious injury or death.
- Do not use with damaged slings or chain. For sling inspection criteria see ASME B30.9.
- Read and understand these instructions before welding on, or using the lifting point.

Important Safety Information - Read and Follow

- Use weld-on lifting point only with ferrous metal (steel) work piece.
- After determining the loads on each weld-on lifting point, select the proper size using the Working Load Limit (WLL) ratings in Table 1.
- Always make sure the weld-on lifting point and mounting surface is free of dirt or contaminants before installation.
- Never use spacers between the weld-on lifting point and mounting surface.
- Always select proper load rated lifting device for use with weld-on lifting point.
- Attach lifting device ensuring free movement of weld-on lifting point bail (Figure 1).
- Apply partial load and check proper alignment. There should be no interference between load (work piece) and weld-on lifting point (Figure 2).
- Always ensure free movement of bail. The bail should pivot 180 degrees (Figure 4).
- The support structure that the lifting point is attached to must be of suitable size, composition and quality to support the anticipated loads of all operating positions. The required support structure thickness for a given application is dependent on variables such as unsupported length and material strength, and should be determined by a qualified individual.
- Never repair, alter, rework or reshape the lifting point bail by welding, heating, burning or bending.

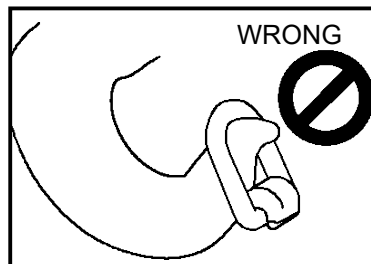


Figure 1

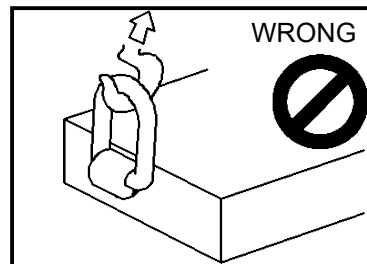


Figure 2



ORIGINAL USER AND INSTALLATION INSTRUCTION: Weld-on Lifting Point 8-057

CERTEX

CONFORMITY

BA11.428-057UK30.09.21

In accordance with the Machinery Directive 2006/42EC. CERTEX Danmark A/S assures, that the equipment supplied is CE marked and delivered in accordance with Danish Standard. If the customer makes any kind of modifications, or if the customer combines the product with a non-compliant product / component assumes CERTEX Danmark A/S is not responsible for the product.

INFORMATION

According to the Labour Inspection Authorization No. 2.3.0.4 "gripping" the staff to use lifting equipment must be instructed in the proper execution of work. The instruction must be in accordance with this authorization and shall include the specific actions required by each anhængningsarbejde.

Before the equipment into service, this manual should be read through. The information is intended as a means to achieve the safe use of equipment.

User manual contains important information about how equipment is operating safely and properly.

Is the equipment used in accordance with these instructions may hazards and damage avoided.

Anyone using the equipment must read and act in accordance with instructions.


Furthermore, we refer also to WEA rules and regulations that otherwise apply on the spot. Including a.o. The message No 2:02:10.

IMPORTANT! WLL is not exceeded, and label instructions must be followed.

Table 1

8-057 Weld-on Lifting Point **

| Item No. | Working Load Limit tonnes* | Dimensions (mm) | | | | | | | N.W. Kg |
|-----------|-------------------------------|-----------------|----|----|----|-----|----|-----|------------|
| | | W | D | F | K | H | R | L | |
| 8-057-1T | 1.0 | 50 | 14 | 27 | 38 | 55 | 24 | 105 | 0.5 |
| 8-057-3T | 3.0 | 58 | 17 | 34 | 48 | 60 | 29 | 112 | 0.8 |
| 8-057-5T | 5.0 | 64 | 22 | 43 | 61 | 74 | 33 | 154 | 1.8 |
| 8-057-8T | 8.0 | 61 | 27 | 54 | 73 | 82 | 34 | 169 | 2.6 |
| 8-057-10T | 10.0 | 75 | 20 | 54 | 73 | 103 | 41 | 191 | 3.1 |
| 8-057-15T | 15.0 | 91 | 25 | 70 | 93 | 123 | 50 | 234 | 6.5 |

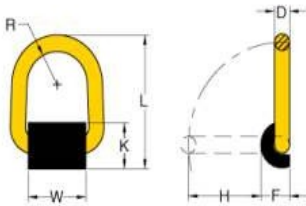

★ Design factor 5:1

** Designed to be used with ferrous work piece only.

Weld-on Lifting Point Welding Guidelines

- 1 Select the correct size weld-on lifting point to be used. Be sure to calculate the maximum load that will be applied to the weld-on lifting point.
- 2 Place the weld-on lifting point onto the mounting surface. The bottom of the link base must be parallel and even with the mounting surface.
- 3 Welding is to be performed by a qualified welder using a qualified procedure in accordance with American Welding Society and/or American Society of Mechanical Engineers requirements. Always follow your country or local mandatory regulations or codes.
- 4 The following welding recommendations should be included in the qualified procedure for welding to low or medium carbon plate steel. For welding to other grades of steel, a qualified weld procedure must be developed.
 - A. Weld material is to have a minimum tensile strength of 70,000 PSI (such as AWS A5.1 E-7018). Observe the electrode manufacturer's recommendations. Completely fill internal fillet created between weld-on lifting point base and mounting surface.
 - B. Before welding, all weld surfaces must be clean and free from rust, grease, paint, slag and any other contaminants.
 - C. Fillet weld leg size should be minimum shown in Table 1. Weld profiles to be in accordance with AWS. Weld size is measured by length of leg.
 - D. Welding should be carried out in a minimum of two passes to ensure adequate root penetration at the base of the lifting point.
 - E. Weld full length of "W" dimension on both sides of link base (Table 1).



ORIGINAL USER AND INSTALLATION INSTRUCTION: Weld-on Lifting Point 8-057

CERTEX

CONFORMITY

BA11.428-057UK30.09.21

In accordance with the Machinery Directive 2006/42EC. CERTEX Danmark A/S assures, that the equipment supplied is CE marked and delivered in accordance with Danish Standard. If the customer makes any kind of modifications, or if the customer combines the product with a non-compliant product / component assumes CERTEX Danmark A/S is not responsible for the product.

INFORMATION

According to the Labour Inspection Authorization No. 2.3.0.4 "gripping" the staff to use lifting equipment must be instructed in the proper execution of work. The instruction must be in accordance with this authorization and shall include the specific actions required by each anhængningsarbejde.

Before the equipment into service, this manual should be read through. The information is intended as a means to achieve the safe use of equipment.

User manual contains important information about how equipment is operating safely and properly.

Is the equipment used in accordance with these instructions may hazards and damage avoided.

Anyone using the equipment must read and act in accordance with instructions.

Furthermore, we refer also to WEA rules and regulations that otherwise apply on the spot. Including a.o. The message No 2:02:10.

IMPORTANT! WLL is not exceeded, and label instructions must be followed.

- F. Do not weld close to the bail. After welding, ensure bail pivots full 180° without interfering with the weld.
- G. Do not rapidly cool the weld.
- H. The ends of the weld must be ground sufficiently so that the weld-on lifting point will fit flush against the mounting surface.
- I. A thorough inspection of the weld should be performed. No cracks, pitting, inclusions, notches or undercuts are allowed. If doubt exists, use a suitable NDE method, such as magnetic particle or liquid penetrant to verify.
- J. If repair is required, grind out the defect and re-weld using the original qualified procedure.

Operating Safety

- Never exceed the capacity (WLL) of the weld-on lifting point (Table 1).
- Never apply load except in line with the pivot direction (Figure 4).
- When using lifting slings of two or more legs, make sure the forces in the legs are calculated using the angle from the horizontal sling angle to the leg and select the proper size link.

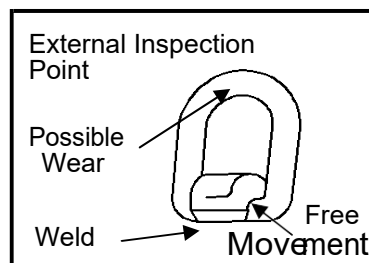


Figure 3

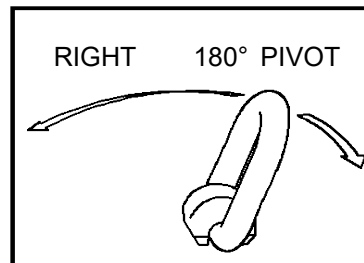


Figure 4



ORIGINAL USER AND INSTALLATION INSTRUCTION: Weld-on Lifting Point 8-057

CERTEX

CONFORMITY

In accordance with the Machinery Directive 2006/42EC. CERTEX Danmark A/S assures, that the equipment supplied is CE marked and delivered in accordance with Danish Standard. If the customer makes any kind of modifications, or if the customer combines the product with a non-compliant product / component assumes CERTEX Danmark A/S is not responsible for the product.

BA11.428-057UK30.09.21

INFORMATION

According to the Labour Inspection Authorization No. 2.3.0.4 "gripping" the staff to use lifting equipment must be instructed in the proper execution of work. The instruction must be in accordance with this authorization and shall include the specific actions required by each anhuingsarbejde.

Before the equipment into service, this manual should be read through. The information is intended as a means to achieve the safe use of equipment.

User manual contains important information about how equipment is operating safely and properly.


Is the equipment used in accordance with these instructions may hazards and damage avoided.

Anyone using the equipment must read and act in accordance with instructions.

Furthermore, we refer also to WEA rules and regulations that otherwise apply on the spot. Including a.o. The message No 2:02:10.

IMPORTANT! WLL is not exceeded, and label instructions must be followed.


Do not reeve slings from one bail to another. This will alter the load and angle of loading on the lifting point.

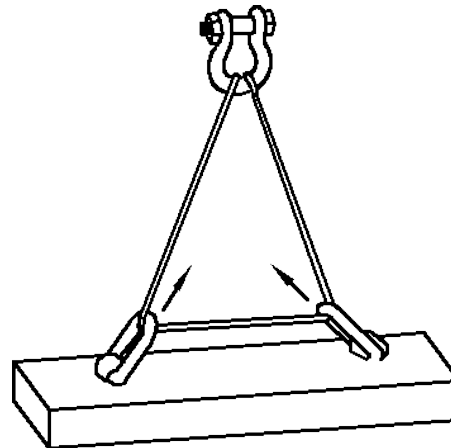

WRONG



After slings have been properly attached to the lifting point, apply force slowly. Watch the load and be prepared to stop applying force if the load starts buckling.

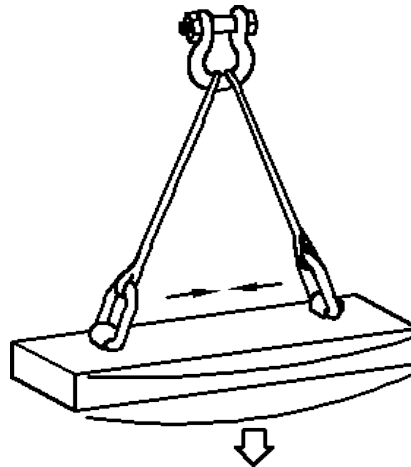

Buckling may occur if the load is not stiff enough to resist the compressive force which results from the angular loading.



ORIGINAL USER AND INSTALLATION INSTRUCTION: Weld-on Lifting Point 8-057

CERTEX

CONFORMITY

In accordance with the Machinery Directive 2006/42EC. CERTEX Danmark A/S assures, that the equipment supplied is CE marked and delivered in accordance with Danish Standard.

If the customer makes any kind of modifications, or if the customer combines the product with a non-compliant product / component assumes CERTEX Danmark A/S is not responsible for the product.

BA11.428-057UK30.09.21

INFORMATION

According to the Labour Inspection Authorization No. 2.3.0.4 "gripping" the staff to use lifting equipment must be instructed in the proper execution of work. The instruction must be in accordance with this authorization and shall include the specific actions required by each anghningsarbejde.

Before the equipment into service, this manual should be read through. The information is intended as a means to achieve the safe use of equipment.

User manual contains important information about how equipment is operating safely and properly.

Is the equipment used in accordance with these instructions may hazards and damage avoided.

Anyone using the equipment must read and act in accordance with instructions.

Furthermore, we refer also to WEA rules and regulations that otherwise apply on the spot. Including a.o. The message No 2:02:10.

IMPORTANT! WLL is not exceeded, and label instructions must be followed.

Weld-on Lifting Point Inspection / Maintenance

- Always inspect weld-on lifting point before use.
- Regularly inspect weld-on lifting point parts (Figure 3).
- Never use weld-on lifting point that shows signs of corrosion, wear or damage.
- Never use weld-on lifting point if bail is bent or elongated.
- Do not use part showing cracks, nicks or gouges.
- Always make sure there are no spacers used between weld-on lifting point and the mounting surface.
- Always be sure work piece surface is in total contact with the weld-on lifting point base mating surface.
- Always inspect the weld-on lifting point bail and base for wear.
- A visual periodic inspection of the weld should be performed. Check the weld visually, or use a suitable NDE method if required.

The welding should only be carried out by qualified welder according to Standards, e.g. EN 287 or AWS.

Support material

- Material of the welding block is S355J2+N (1.0577+N, St 52-3N, B.S. 4360.50D, AISI 1019 etc.).
- Prior to welding, the contact areas must be free from impurities, oil, paint, rust, scale, etc., for example by grinding. If the surface is at all corroded, all rust must be completely removed from the weld area. Painted surface must be prepared in the same way.
- The steel support member must have a carbon content of no less than 0.25% and no more than 0.40%.
- In ambient temperature of 10°C and below, pre-heating of the weld area prior to welding must be carried out.

Seam welding

- The welds must be sufficiently strong to take the required loads.
- The distance lugs assist in achieving the required root weld (approx. 3 mm).
- A minimum weld-seam width must be maintained to give adequate weld strength (see table)
- Start both, the root pass and final weld pass from the centre of the support to be welded.



ORIGINAL USER AND INSTALLATION INSTRUCTION: Weld-on Lifting Point 8-057

CERTEX

CONFORMITY

BA11.428-057UK30.09.21

In accordance with the Machinery Directive 2006/42EC. CERTEX Danmark A/S assures, that the equipment supplied is CE marked and delivered in accordance with Danish Standard. If the customer makes any kind of modifications, or if the customer combines the product with a non-compliant product / component assumes CERTEX Danmark A/S is not responsible for the product.

INFORMATION

According to the Labour Inspection Authorization No. 2.3.0.4 "gripping" the staff to use lifting equipment must be instructed in the proper execution of work. The instruction must be in accordance with this authorization and shall include the specific actions required by each anhedningsarbejde.

Before the equipment into service, this manual should be read through. The information is intended as a means to achieve the safe use of equipment.

User manual contains important information about how equipment is operating safely and properly.

Is the equipment used in accordance with these instructions may hazards and damage avoided.

Anyone using the equipment must read and act in accordance with instructions.

Furthermore, we refer also to WEA rules and regulations that otherwise apply on the spot. Including a.o. The message No 2:02:10.

IMPORTANT! WLL is not exceeded, and label instructions must be followed.

- Before starting the final weld pass, clean well the root pass to avoid inclusions.
- The complete welding operation must be carried out continuously so that the parts do not have time to cool.
- Do not weld at the yellow powder coated tempered load ring.
- After welding, ensure bail pivots full 180° without interfering with the weld.
- Effects of temperature
 - The lifting points for weld on, types DAA, can together with the load (e.g. weldconstruction) be annealed, Temperature < 600° C, stress-release without reduction of WLL.
 - The complete construction can be annealed stress release at <600°C without reduction of WLL.
 - Do not rapidly cool the weld.
- A thorough inspection of the weld should be performed. No cracks, pitting, inclusions, notches or undercuts are allowed. If doubt exists, use a suitable NDT method, such as magnetic particle or liquid penetrant to verify.
- If repair is required, grind out the defect and re-weld using the original qualified procedure.

Welding material

Weld material is to have a minimum tensile strength of 70,000 PSI (such as AWS A5.1 E-7018), following the electrode manufacturer's recommendations. Reference information as below:

MIG arc welding:

Wire diameter 0.8 - 1.2 as per DIN 8559-SG 3, AWS A 5.18.

Important: do not weld in the open air during bad weather

Manual electric:

Direct current supply welding:

Electrodes according to EN ISO 2560-A - E 42 6 B 3 2, AWS A 5.5 : E 8018-G.

Electrode: root pass and final weld pass, type E5154 B10 as per DIN 1913, used in accordance with the manufacturers.



**ORIGINAL USER AND INSTALLATION INSTRUCTION:
Weld-on Lifting Point 8-057**



CONFORMITY

BA11.428-057UK30.09.21

In accordance with the Machinery Directive 2006/42EC. CERTEX Danmark A/S assures, that the equipment supplied is CE marked and delivered in accordance with Danish Standard. If the customer makes any kind of modifications, or if the customer combines the product with a non-compliant product / component assumes CERTEX Danmark A/S is not responsible for the product.

INFORMATION

According to the Labour Inspection Authorization No. 2.3.0.4 "gripping" the staff to use lifting equipment must be instructed in the proper execution of work. The instruction must be in accordance with this authorization and shall include the specific actions required by each anhugningsarbejde.

Before the equipment into service, this manual should be read through. The information is intended as a means to achieve the safe use of equipment.

User manual contains important information about how equipment is operating safely and properly.

Is the equipment used in accordance with these instructions may hazards and damage avoided.

Anyone using the equipment must read and act in accordance with instructions.

Furthermore, we refer also to WEA rules and regulations that otherwise apply on the spot. Including a.o. The message No 2:02:10.


IMPORTANT! WLL is not exceeded, and label instructions must be followed.

Alternating current supply welding:

Electrode as per DIN 1913, modified for alternating current use.

HV welding and final weld pass, type E5155 B10.

Specifications:

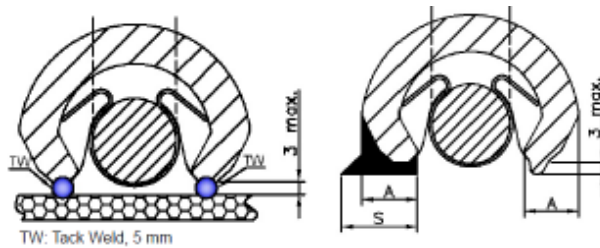

| Art. No. | Code | WLL (ton) | Thickness A (mm) | Weld Size S (mm) |
|-----------|-------|-----------|------------------|------------------|
| 8-057-1T | DAA1 | 1.0 | 10 | S=A+3 |
| 8-057-3T | DAA3 | 3.0 | 12 | S=A+4 |
| 8-057-5T | DAA5 | 5.0 | 17 | S=A+5 |
| 8-057-8T | DAA8 | 8.0 | 16 | S=A+4 |
| 8-057-10T | DAA10 | 10.0 | 17 | S=A+5 |
| 8-057-15T | DAA15 | 15.0 | 25 | S=A+7 |



Lifting Solutions Group
Axel Johnson International

Nyvang 16, 2nd floor left
DK-5500 Middelfart
Tlf.: +45 74 54 14 37

Virkelyst 17b
DK-9400 Nørresundby
Tlf.: +45 98 13 18 88

Jernholmen 45D+45G
DK-2650 Hvidovre
Tlf.: +45 36 77 40 30

Olievej 4
DK-6700 Esbjerg
Tlf.: +45 75 13 08 44

CERTEX Danmark A/S
Trekanten 6-8
DK-6500 Vojens
Tlf.: +45 74 54 14 37
E-mail: info@certex.dk
www.certex.dk